


DETU200-4BSS

UNIT COMPONENTS	1
DETU2004B Wiring	2
DETU2004B Error Codes	3
Appendix A:Pages Index	A
Appendix B:Parts Index	B


UNIT COMPONENTS

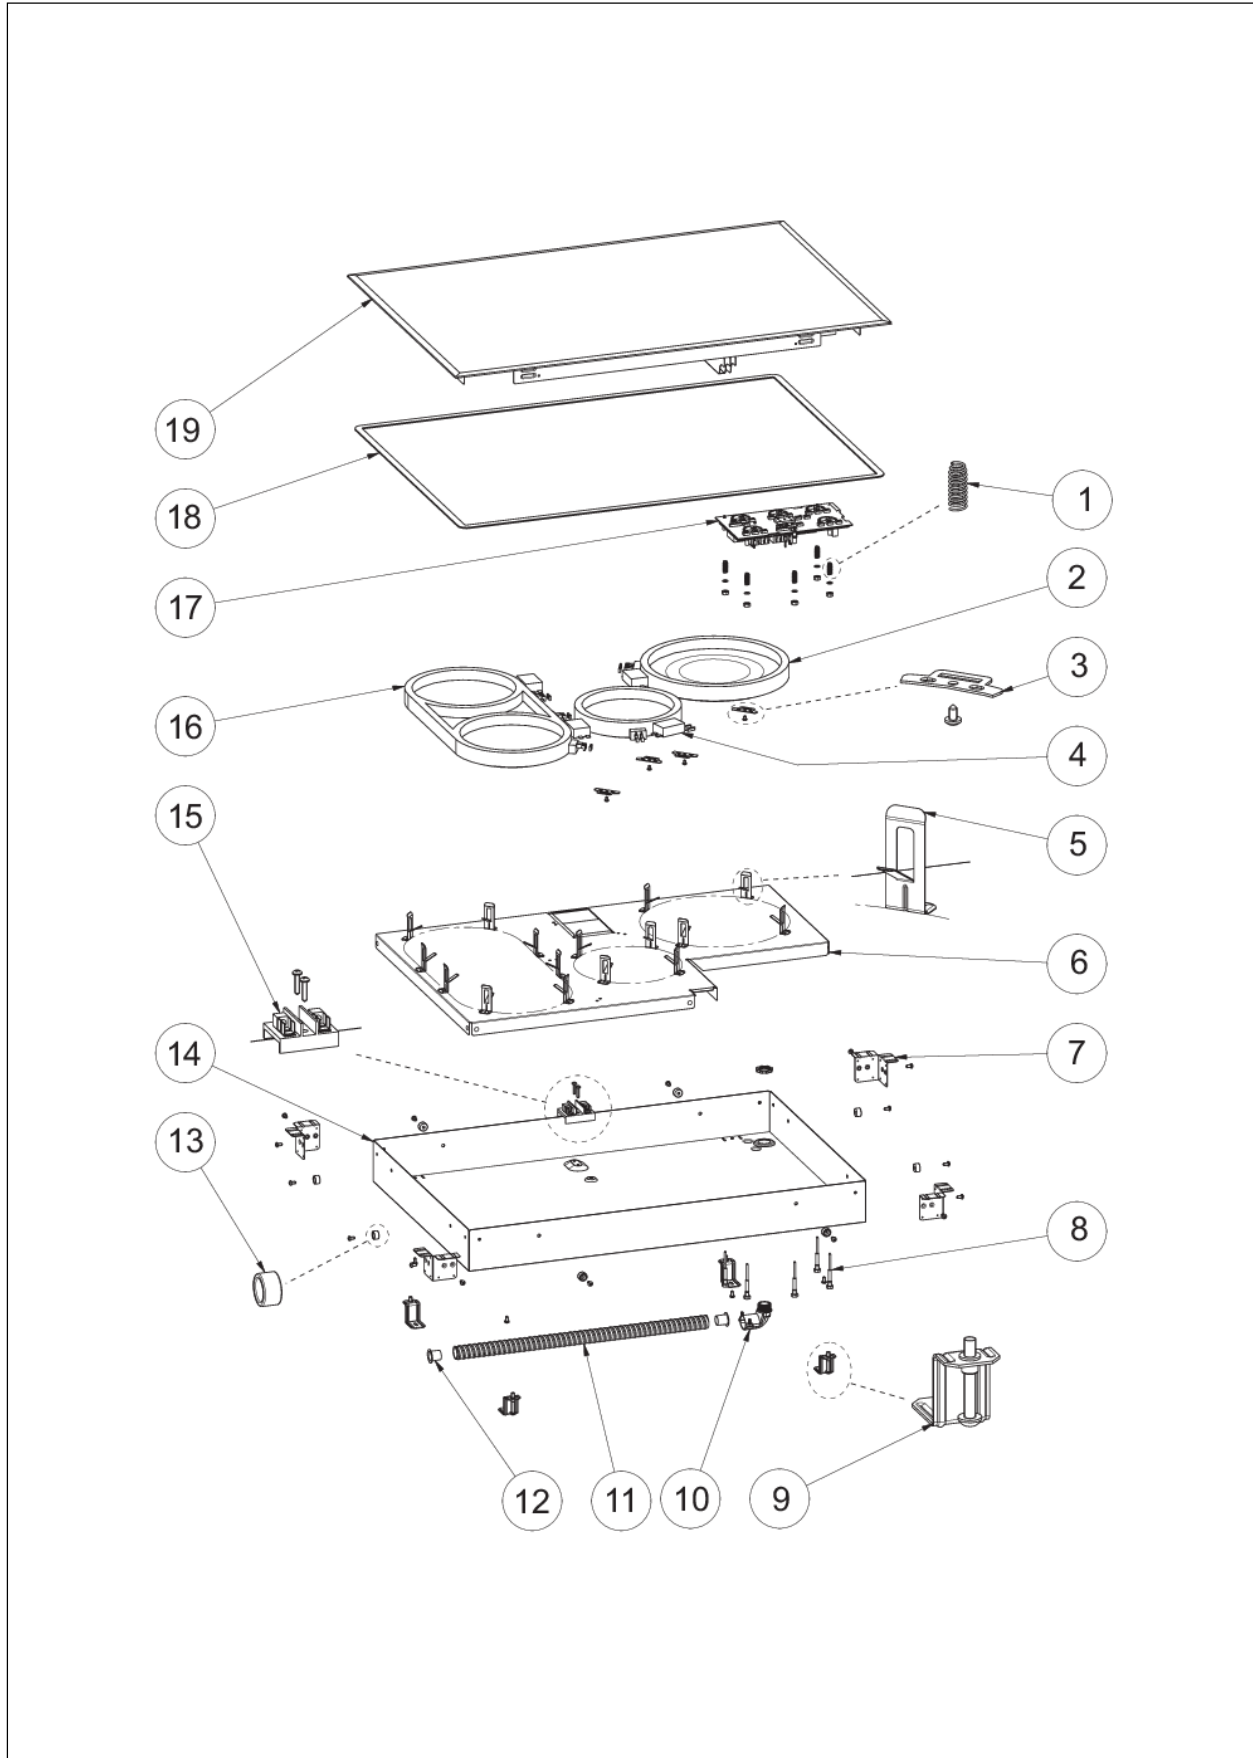



Item	Part No.	Name	Qty	Uom	NOTES
1	022339-000	SPRING	5	EA	
2	022331-000	HEATING ELEMENT.255/185/125 H.LIGHT 240V	1	EA	
3	022319-000	LOCKING HOOK	4	EA	Not available online / Call for pricing and availability
4	022330-000	HEATING ELEMENT.155 H.LIGHT 240V	1	EA	
5	022320-000	SPRING CLIP, FIXING HEATING ELEMENT	16	EA	
6	022338-000	DOUBLE BOTTOM FOR CERAMIC COOKTOP TC 30"	1	EA	
7	022322-000	SQUARE SUPPORT BOX	4	EA	
8	022323-000	SCREW FIXING ELECTRONIC CONTROL	4	EA	
9	022333-000	ASSEMBY BRACKET FIXING	4	EA	
10	022329-000	ANGLED CONNECTOR (POWER CABLE ASSY)	1	EA	
11	022327-000	CONDUIT FOR CABLES PROTECTION	1	EA	Not available online / Call for pricing and availability
12	022328-000	PLASTIC PROTECTION (POWER CABLE)	2	EA	
13	022321-000	SPACER FOR CERAMIC COKTOP 30/36	1	EA	
14	022337-000	BOX FOR CERAMIC COOKTOP TC 30"	1	EA	
15	022325-000	POWER TERMINAL BLOCK	1	EA	
16	022332-000	HEATING BRIDGE ELEMENT.175/175 H.LIGHT 240V	1	EA	
17	022326-000	ELECTRONIC TOUCH CONTROL	1	EA	
18	022336-000	PERIMETRIC SEAL	1	EA	
19	022334-000	GLASS COOKTOP ASSY.VIKING 30" RIVER BOAT	1	EA	
NI	022324-000	SCRAPER	1	EA	
NI	022335-000	WIRING	1	EA	Not available online / Call for pricing and availability

DETU2004B Wiring

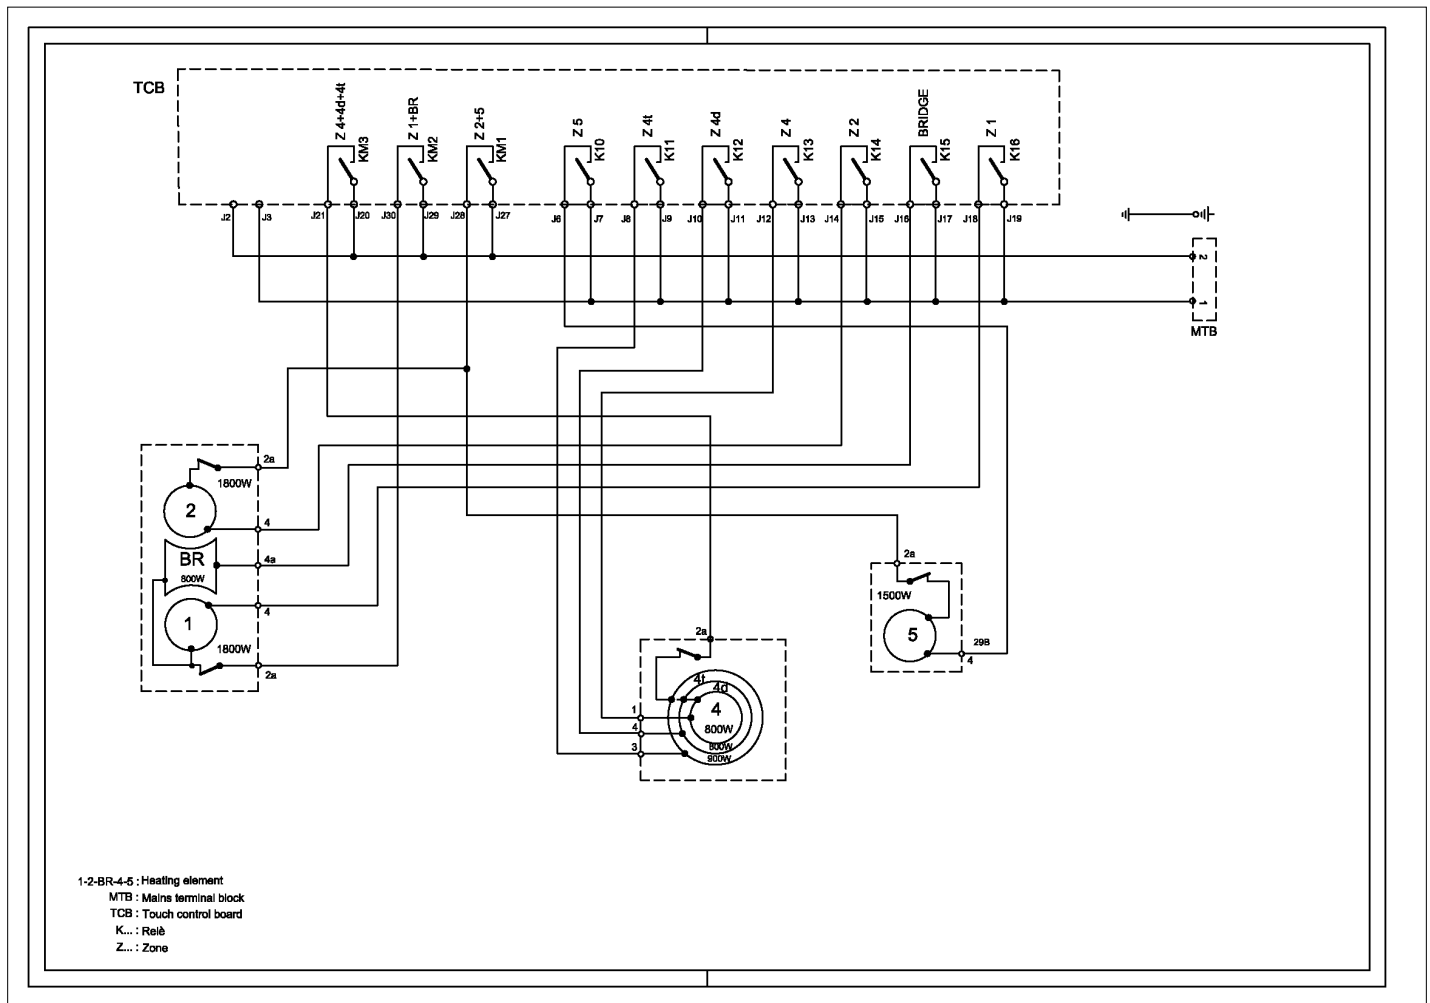

DETU2004B Error Codes

Surface Operation

Continuous Use

The cooktop can work continuously for a maximum time of 10 hours. The control panel is checking its own ambient temperature and stops any activity in case of overheating of inner parts. Let the appliance cool down.

Error Codes

The control panel has an error detection system, mainly checking the functionality of the electronics (keyboard functionality, ambient light conditions, communication between the two boards and the working temperature of the control). As soon as an error is detected, the control panel stops all the heating elements and declares the error code, showing on the timer display "F" and a second letter in order to identify the error (see the table below).

Error Code	Error
FA, FC	Key error
FE, Ft	Temperature sensor failure
Fc	Over temperature
Fr	Relay error
FH	Control error (EEPROM)
FJ	Key error
FO	Software error
FL	Keyboard error (ambient light)
FU	Key error
Fd	LED On/Off test error
Fb	Keyboard error
F5	Communication error

Operation



Appendix A:Pages Index

DETU2004B Error Codes 3

DETU2004B Wiring 2

UNIT COMPONENTS 1



Appendix B:Parts Index

022319-000	1
022320-000	1
022321-000	1
022322-000	1
022323-000	1
022324-000	1
022325-000	1
022326-000	1
022327-000	1
022328-000	1
022329-000	1
022330-000	1
022331-000	1
022332-000	1
022333-000	1
022334-000	1
022335-000	1
022336-000	1
022337-000	1
022338-000	1
022339-000	1